


Quick Start Guide

BD-SP808




Basic Connections

Make one of the following connections, depending on the capabilities of your existing device.

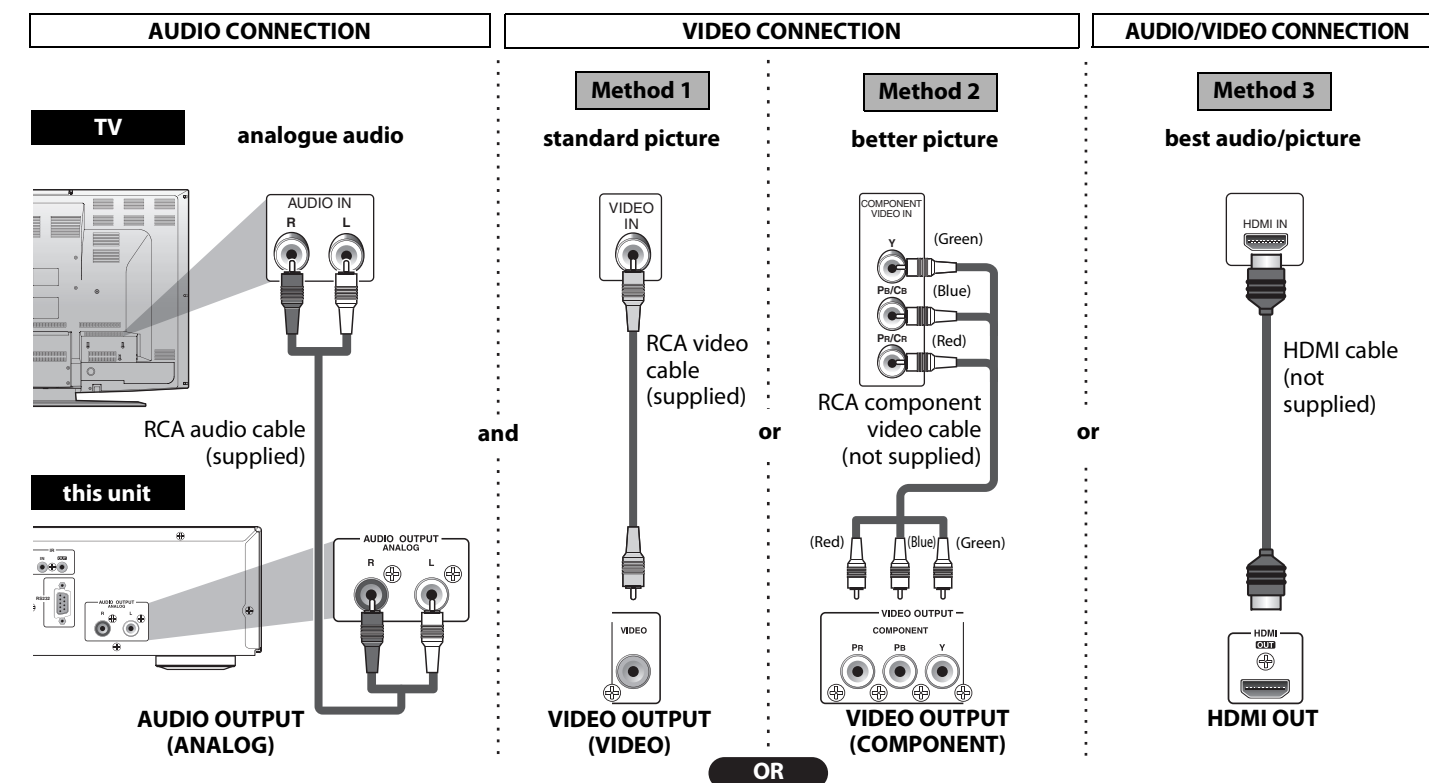

HDMI Connection

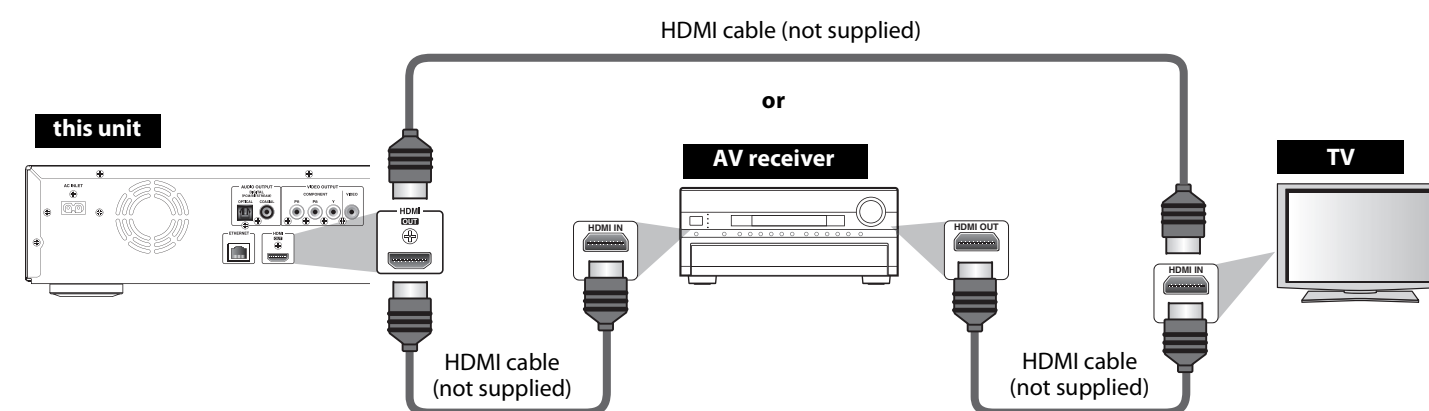


Press **[RESOLUTION]** to change the resolution of the video signal being output from HDMI OUT jack.
 (For BD/AVCHD, press **[STOP]** first.)

Note


- You cannot select the video resolutions which are not supported by the connected TV.
- In order to get natural and high quality film reproduction of 24-frame film material, use an HDMI cable (High Speed HDMI cable is recommended) and select "1080p24", "Auto" or "Source Direct" if the connected TV is compatible with 1080p24 frame input.
- If no sound is output, check "HDMI Audio Out" setting. (Refer to page 48 in the Instruction Manual.)

Connecting an AV Receiver

Make one of the following connections, depending on the capabilities of your existing device.

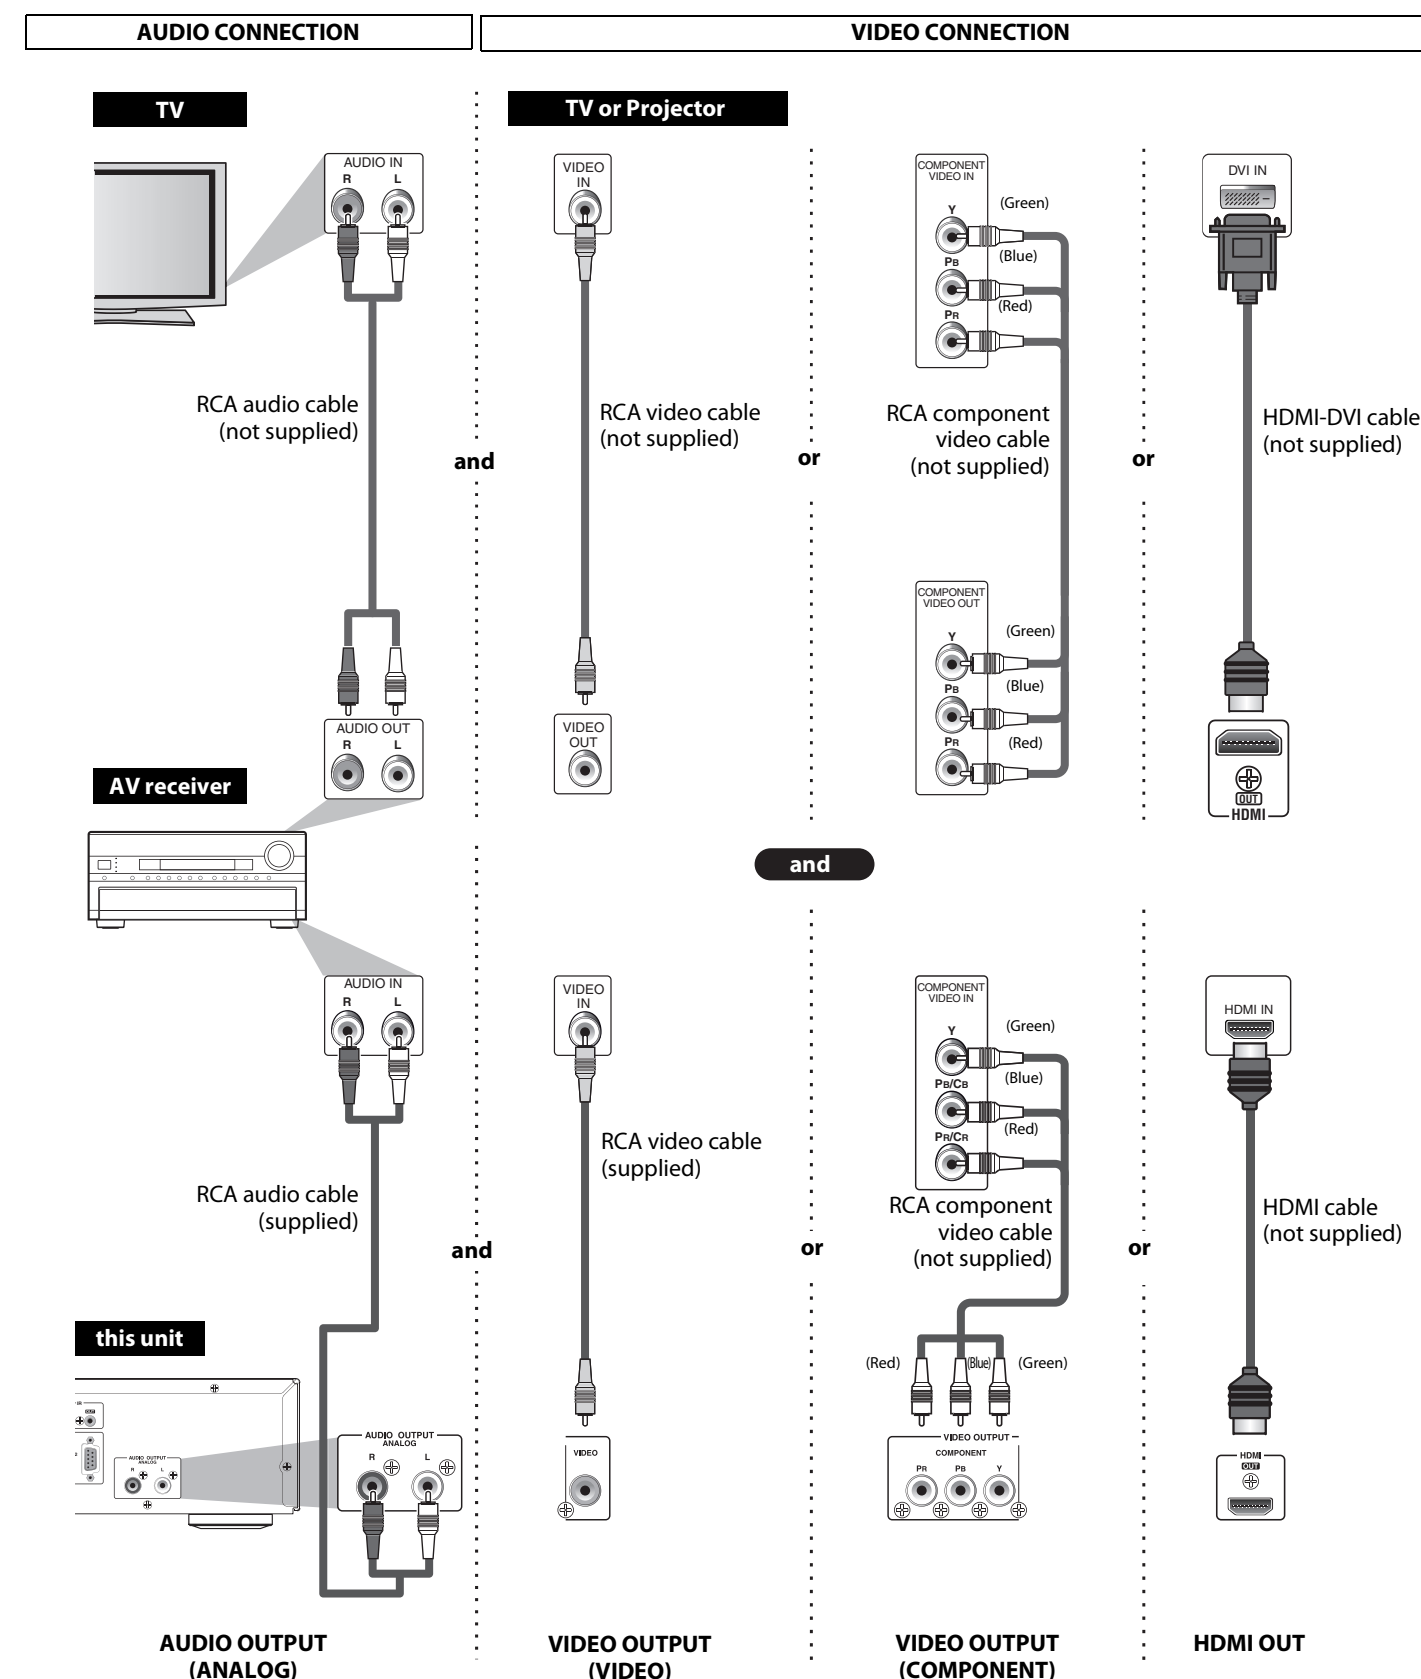


Connecting to a Digital Audio System

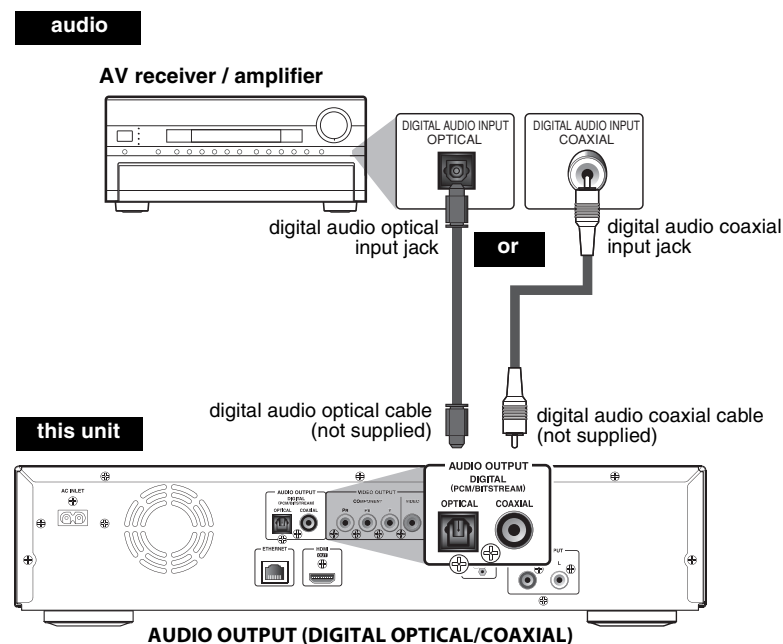


Network Connection with LAN

By connecting this unit to the Internet, you can update the software via the Internet, play contents stored on DLNA home media servers or access BD-Live.

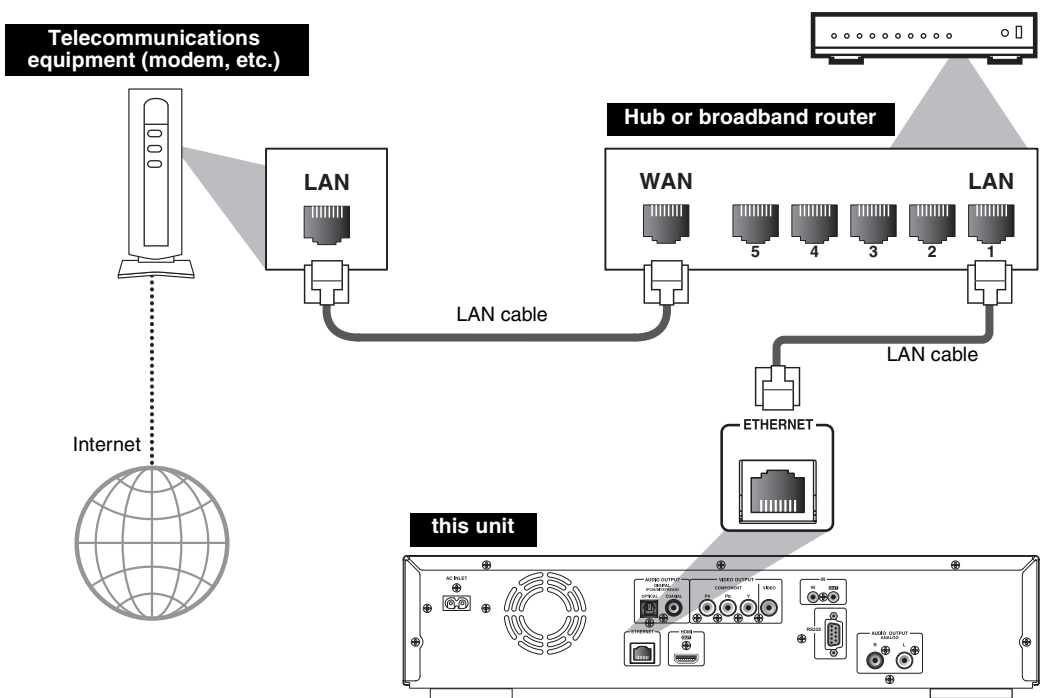

Connecting the AC Cord

After you made all necessary connections, connect the AC cord to the AC INLET. Then connect the AC cord to the AC outlet. **Insert the plugs securely. Incomplete connections will result in the generation of noise.**

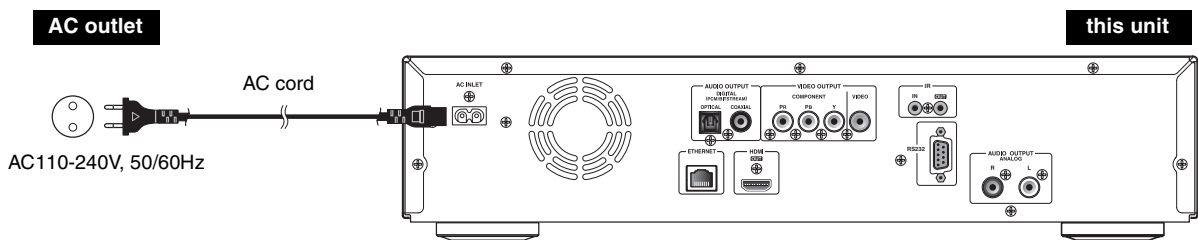

Playback




1 Press [ON / STANDBY I/O].

2 Turn on the TV and select the appropriate input on the TV to which the unit is connected.



3 Press [OPEN/CLOSE ▲] to open the disc tray.

4 Place the disc on the disc tray with its label side facing up.

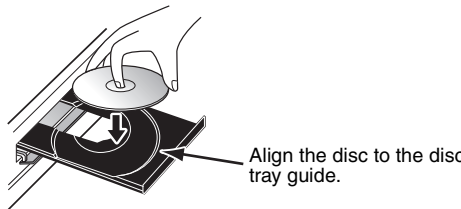

5 Press [OPEN/CLOSE ▲] to close the disc tray.
It may take a while to load the disc.



6 Playback may start automatically.

• If not, press ► (play).



To pause playback:

Press [■] (pause).

To return to normal playback:

Press ► (play).

To stop playback:

Press [■] (stop).

To eject the disc:

Press [OPEN/CLOSE ▲] to open the disc tray, then remove the disc before turning off the unit.